

Portable Valve Actuators


PY68 Petrol gas series

Instruction manual

Light, powerful and fast, modec PVAs (Portable Valve Actuators) offer improved **safety** and **comfort** for operators and protect equipment from damage. They can be adapted to all types of handwheels, keys and valves, and have a torque range that can reach up to 1000Nm.

They can be powered by various energy sources. What's more, they come with a large number of **options, adaptors** and **accessories** so they can be specified to exactly match the requirements of all clients and all applications.

modec gas portable valve actuators can be used in **total autonomy** – the only limit being the available petrol supply. They are particularly suitable for use in **isolated outdoor places**. Extremely robust, they have an **integrated clutch system that protects the operator and the equipment**, even if a valve is completely blocked.

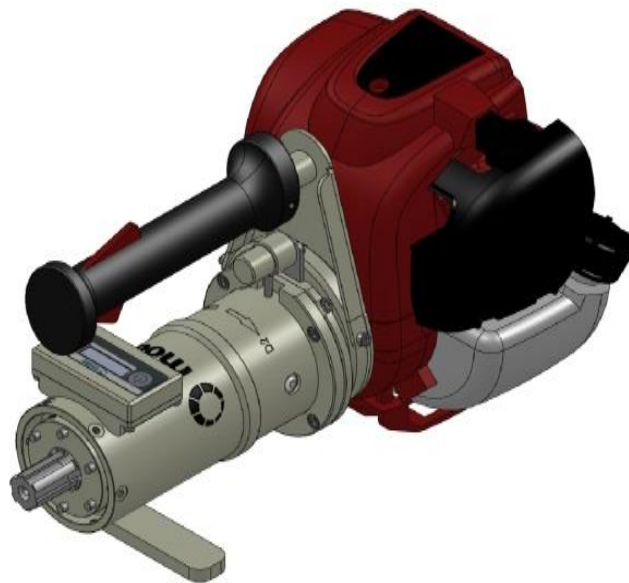

CAREFULLY READ THE OPERATING HANDBOOK BEFORE USE



Table of content

1. General safety warnings	4
a. Transporting the actuator	5
b. Storing the actuator.....	5
c. Protecting the environment	5
2. CE certification.....	6
3. Safety equipment	7
4. Description and technical specifications.....	8
5. Starting up the Portable Valve Actuator	10
a. Filling the fuel tank	10
b. Before starting up.....	10
6. Setting up the Portable Valve Actuator.....	12
a. General info	12
b. Fixing the actuator on to the torque management device and/or on an adaptor.....	12
c. Fixing the BR001 torque management arm and anchoring strap	13
d. Setting the system for rotation “D1”	13
e. Setting the system for rotation “D2”	13
7. Using the actuator	14
a. Preliminary checks	14
b. Potential problems when actuating a valve	15
8. Options.....	16
a. Digital Revolution counter	16
b. Torque limiter	17
9. Servicing and maintenance	18
10. Problem solving	19
11. Warranty	20

Introduction

This instruction manual must always be available and kept close to where the actuator will be used.

This document is unique and is owned by the company **modec**. It cannot be corrected, modified or duplicated without prior written agreement. This document should not be considered a replacement for safety rules set out in the Work Code or in any other legislation that applies to the site where the actuator is used.

It belongs to the operators to make sure that all security regulations applicable to both the work site and the Portable Valve Actuator conditions of use are respected.

modec products are conceived and fabricated with the utmost care and attention for the safety of both the operator and the equipment. This is certified by the declaration of conformity with the relevant clauses in the European directive 2006/42/CE.

The actuators described in this document may evolve. We reserve the right to modify their specifications, without prior notice. Updates will be available on our website www.moddec.fr. It is important to refer to the website before setting up or using the actuator, and before carrying out maintenance. Any modifications made to the actuators or their accessories must be approved in writing by **modec**.


Operators in charge of setting up, using or servicing **modec** actuators must have a reasonable knowledge of the equipment. As well as carefully reading this instruction manual, they must be competent in the valve sector and the particularities related to their work environment.



KEEP THESE INSTRUCTIONS

This manual contains important information and user instructions for the following tools:
Petrol Gas Portable Valve Actuator PY68x-xxx-xx.

It is **IMPERATIVE** that you read the whole of this user guide before using the tool or carrying out any maintenance operations. Make sure you follow to the letter the instructions and diagrams found in this document. Failure to adhere to the instructions contained in this manual, and any modifications, omissions or the use of replacement parts that do not adhere to the specifications set out in this manual, clears the manufacturer of all responsibility related to the protection of people and equipment.

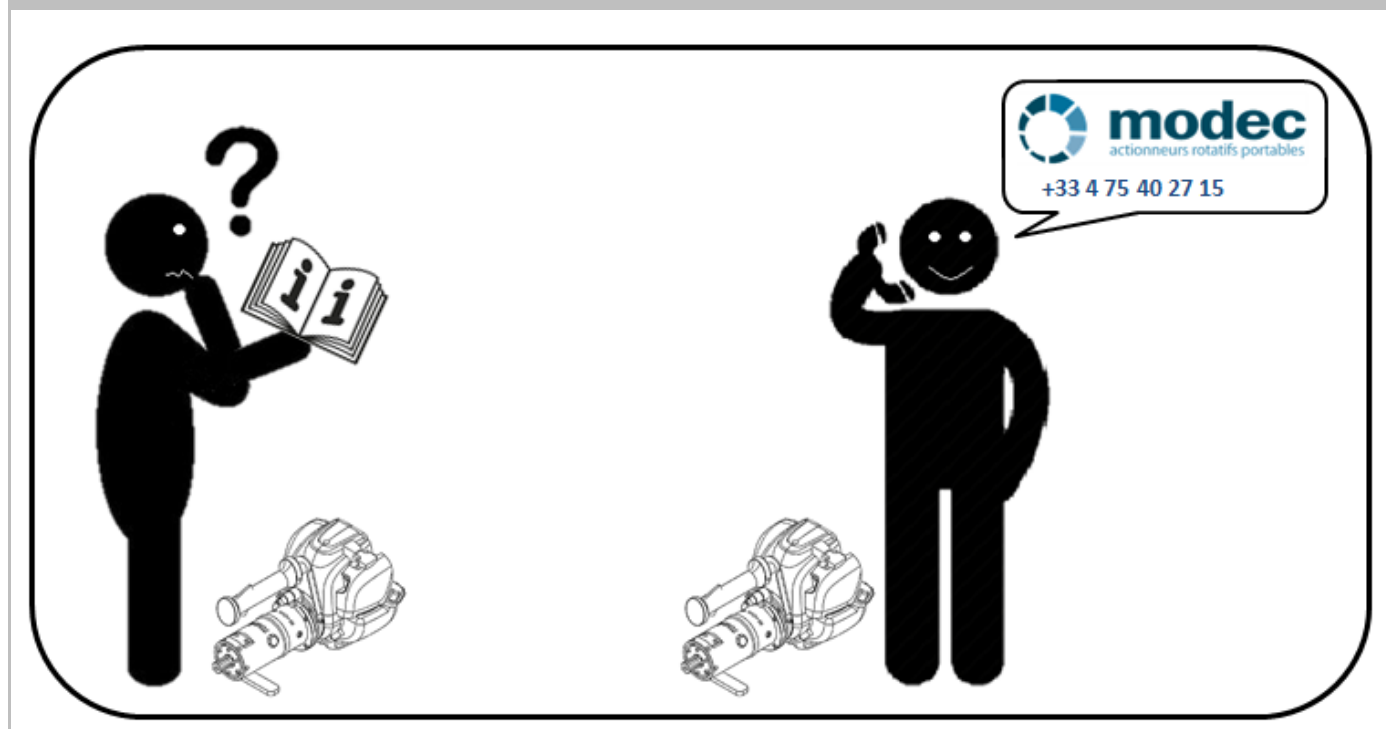

1. General safety warnings

This machine is not intended for use by people with reduced physical, sensory or mental capacity, or by people devoid of experience or knowledge, except if they are supervised by, or have been given instructions by, an intermediary for the person responsible for their security.

Portable Valve Actuators are designed solely for use by professional operators trained in how to use them and educated about the relevant safety measures.



To avoid all risk of injury associated with using a **modec** Portable Valve Actuator, take care to always follow the user instructions. Make sure you work in a comfortable position that demands minimal effort from your body, arms and wrists. Keep your wrists straight, without excessive, repetitive or prolonged twisting or extension. Do not use force and do not hold the tool tighter than necessary – avoid long exposure to vibrations.

- The **modec** Portable Valve Actuator is a tool whose use is exclusively for manipulating valve handwheels or rotating systems, such as those described in this document.
- **modec** Portable Valve Actuators are not adapted for manipulating winches or lifts.
- The company **modec** declines all responsibility for damages caused by incorrect use and any use other than the one intended.
- The company **modec** also declines all responsibility for damages resulting from the use of accessories that are not the original.

Work zone safety

- Keep the work area clean and well-lit – minimum level lighting of 300 lux
- Aside from the operator, keep any other people at a safe distance within a radius that takes account of fixed points, straps, chains and any other torque retention system used.
- To protect the operator, we recommend that you do not use the PVAs if there is a risk of lightning.

Safety of personnel during use and maintenance

- Stay vigilant – watch what you are doing and apply common sense when using the tool. Do not use a tool if you are tired or under the influence of drugs, alcohol or medicines.
- Use the individual safety protection equipment (see the summary table, page 7).
- Do not rush ahead – maintain a suitable position and balance at all times.
- Wear suitable clothing – do not wear baggy clothes or jewelry. It is obligatory to tie back hair and to wear close-fitting clothes (not floaty) to ensure all clothing parts are distanced when moving.
- To avoid the motor starting at the wrong time, before picking up or while carrying the PVA, place the cursor in the 0 position. Even better, disconnect the spark plug

Use and servicing

- Do not use the tool if the switch systems for changing direction, accelerating, starting up or stopping are not working properly. This could pose danger to the operator.
- Observe tool maintenance. Check there if no incorrect alignment or blockage of moving parts or from broken parts or any other problem that could affect how the tool functions. If there is any damage, take the necessary steps and precautions to return the tool and its accessories to good working order.
- Have the tool serviced by a qualified repairer using only **modec** products when changing parts.
- Only use valve accessories recommended and approved by **modec**. Think to consult the accessory list provided and/or seek advice from **modec** for specific uses.
- Before starting up the motor, the operator must, without fail, check the follow points:
 - Accessories mounted or activated by the actuator are in good condition and correctly attached.
 - The most suitable torque retention system is being used and it assures the safety of the operator.
 - The system that fixes to the valve or the handwheel is adapted to the valve or handwheel being actuated.
 - Both the actuator and the operator are in a stable position. The operator is placed in opposition to any possible movements the actuator may make while coming to a stop.
- Stop the actuator immediately if it starts to behave differently (a change of noise, increased vibrations). Replace all damaged parts of the actuator and accessories. Damaged parts can burst and cause serious harm, even a potential fatality.
- Before placing a handwheel on, or removing it from, the actuator, wait until the actuator has come to a complete stop.
- Only activate the command to inverse the direction left/right when the actuator is fully stopped, otherwise the operator may find they are working in a poorly adapted position.
- Always hold down the rotation direction switch until it stops.
- In certain circumstances, the tool may keep rotating for several seconds after releasing the switch. Never put your hands close to the tool or any moving parts.




a. Transporting the actuator

- Keep the original casing for return in case of any revisions or repairs.
- When packing, make sure that all switches are off and without any constraints.
- Always pack the tools in the correct spaces to avoid them knocking against each other.
- Empty the petrol and oil tanks.

b. Storing the actuator

- **modec** actuators must be stored in a dry and correctly ventilated environment to ensure there is no corrosion of the internal mechanic parts.

c. Protecting the environment

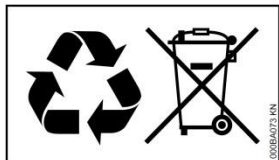

To eliminate waste, conform to the stated national requirements. The actuators and their accessories must not be thrown in a waste bin. Make sure you dispose of the tools in specialist recycling centers.

2. CE certification

CERTIFICATE OF COMPLIANCE (Annex II A)

The undersigned manufacturer

MODEC SAS
ZI Sirius Quatre, 80 allée René Higonet
F-26760 Beaumont lès Valence
N° SIRET : 493 748 917 00017

Declares that the Portable Valve Actuator designated by the following commercial references:

<u>Type</u>	<u>Designation</u>	<u>Serial number</u>
Pneumatic		
HL83E-xxx-xx	Air Portable Actuator, Easy Duty,	HL83E-XXXXXXXX
HL83S-xxx-xx	Air Portable Actuator, Standard Duty	HL83S-XXXXXXXX
HL83H-xxx-xx	Air Portable Actuator, Heavy Duty	HL83H-XXXXXXXX
Petrol gas		
PY68E-xxx-xx	Gas Portable Actuator, Easy Duty	PY68E-XXXXXXXX
PY68S-xxx-xx	Gas Portable Actuator, Standard Duty	PY68S-XXXXXXXX
PY68H-xxx-xx	Gas Portable Actuator, Heavy Duty	PY68H-XXXXXXXX
Electric		
MC89E-xxx-xx	Electric Portable Actuator, Easy Duty	MC89E-XXXXXXXX
MC89S-xxx-xx	Electric Portable Actuator, Standard Duty	MC89S-XXXXXXXX
JA73E-xxx-xx	Electric Portable Actuator, Easy Duty	JA73E-XXXXXXXX
JA73S-xxx-xx	Electric Portable Actuator, Standard Duty	JA73S-XXXXXXXX
JA73H-xxx-xx	Electric Portable Actuator, Heavy Duty	JA73H-XXXXXXXX


complies with the essential requirements of the European Directive 2006/42/EC

Type :

S/N :

Beaumont lès Valence,
 XX/XX/XXXX

Mr. Pierre-Yves COTE
 Managing Director

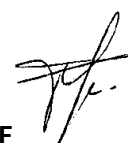

3. Safety equipment

Personal Protective Equipment :

Operators or anyone placed close to the actuators must wear the following protection. It is incumbent on the company using the equipment to ensure that safety rules are respected.



Hearing protection



Protective goggles



Safety shoes



Safety gloves
(level 3121 according
to EN388)



Close-fitting
trousers and jacket
(burning surfaces protection)

Safety signs :

Summary table explaining the pictograms found on the apparatus.



Warning ! Using this
material can be dangerous



Read the notice
before use



Risk of fire



Before adding fuel,
stop the motor and let it cool



The motor gives off
carbon monoxide which is
a toxic gas




Never use the actuator
in an enclosed or poorly
ventilated place



Risk of burning from
the motor switches

4. Description and technical specifications

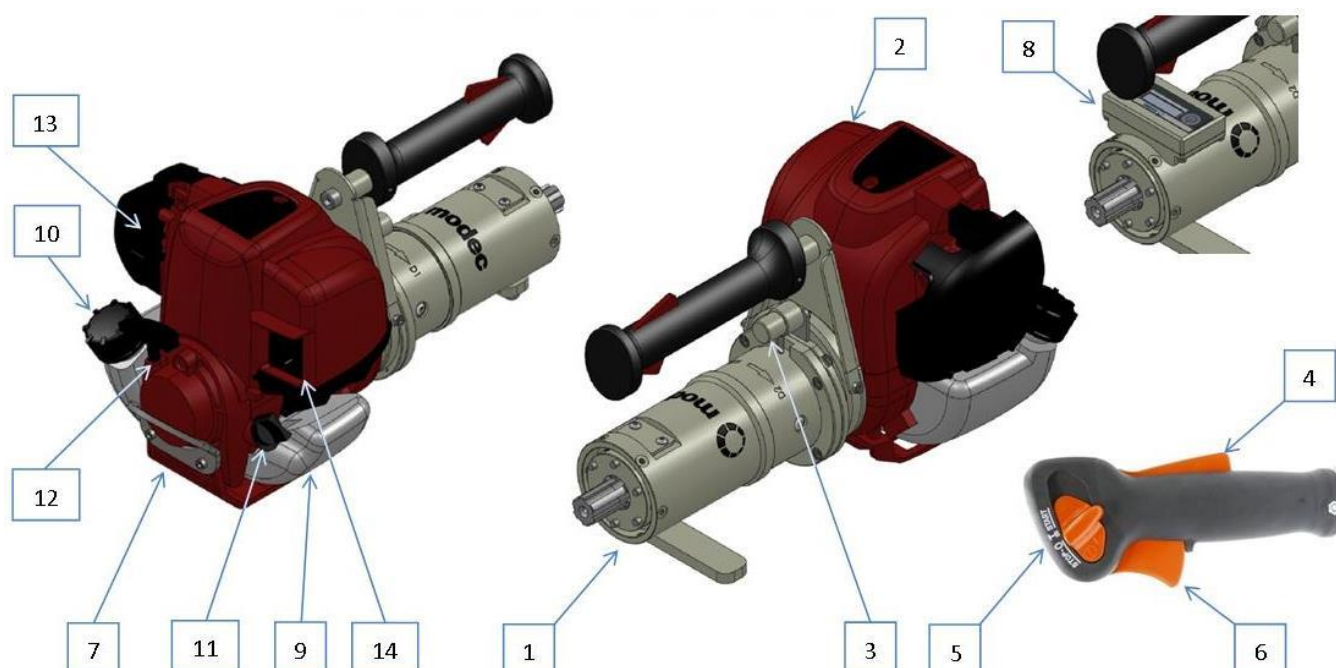

- 1 - Flange: enables the attachment of all **modec** heads, adaptors and torque systems.
- 2 - Petrol gas motor GX35
- 3 - Left/right switch - to choose rotational direction of the actuator.
- 4 - Safety trigger: prevents inadvertently operating the accelerator - the safety catch must be pressed to be able to use the accelerator switch (6).
- 5 - Start / Stop switch: to start up and stop the actuator
- 6 - Accelerator
- 7 - Fastening ring: to attach a strap for transporting the actuator
- 8 - Revolution counter module (option): it gives a double reading - rotating speed and number of turns.
- 9 - Petrol tank
- 10 - Petrol filler cap
- 11 - Oil filler cap and gauge
- 12 - Starter grip
- 13 - Choke lever
- 14 - Exhaust

General specifications	Easy Duty	Standard Duty	Heavy Duty
Model	PY68E-xxx-xx	PY68S-xxx-xx	PY68H-xxx-xx
Weight (kg) (not including options and accessories)	10	10,3	10,3
Dimensions (l x w x h) in mm	442 x 234 x 260		
Type of motor	1cylinder, 4 strokes		
Motor cc	35,8 cm ³ (39,0 x 30,0 mm)		
Motor oil capacity	0,10 L		
Motor petrol capacity	0,63 L		
Power	1,0 kW at 7 000 min ⁻¹ (rpm)		

Straight or with RA30	Free speed (rpm)	Max torque (Nm (lb.ft))	Starting torque (Nm (lb.ft))
PY-68E-031	305	55 (41)	41 (30)
PY-68S-087	100	150 (110)	115 (85)
PY-68S-148	64	260 (190)	195 (145)
PY-68H-192	50	340 (250)	250 (180)
PY-68H-293	32	520 (380)	390 (290)
PY-68H-641	15	1140 (840)*	850 (630)

With Banjo head BJH01	Free speed (rpm)	Max torque (Nm (lb.ft))	Starting torque (Nm (lb.ft))
PY-68E-031	75	220 (160)	160 (120)
PY-68S-087	27	600 (440)	460 (340)
PY-68S-148	Not available		
PY-68H-192			
PY-68H-293			
PY-68H-641			

With Banjo head BJH02	Free speed (rpm)	Max torque (Nm (lb.ft))	Starting torque (Nm (lb.ft))
PY-68E-031	100	165 (120)	120 (90)
PY-68S-087	36	460 (340)	350 (260)
PY-68S-148	21	790 (580)	590 (440)
PY-68H-192	16	1000 (740)*	760 (560)
PY-68H-293	Not available		
PY-68H-641			

* Warning ! Do not use the actuator when the torque is higher than 1000 Nm (740 lb.ft) or use a torque limiter

Sound and vibration levels

Sound and vibration levels are calculated based on the conditions of use at the maximum rated speed. Values apply to the core tool (without added options or accessories). The values can vary significantly depending on the equipment to which the tool is applied. The end operator should establish the actual measurements.

Maximum level of weighted acoustic pressure A at the operator's location	L pA = 95,5 dB(A)
--	--------------------------

Values established from an equivalent apparatus.

Value of vibration emission	$a_h < 5 \text{ m/s}^2$
Uncertainty of measure	4 m/s^2

Values established from an equivalent apparatus.

5. Starting up the Portable Valve Actuator


a. Filling the fuel tank



Pressure can increase in containers holding petrol, due to the ambient temperature. Open the petrol cap carefully to avoid any projection. Leave the fuel in a cool place, for short periods and never leave it in the sun.

PRECAUTION

- Clean the fuel tank cap and its surrounds to prevent any foreign bodies entering the tank.
- Fill the fuel tank using an appropriate-sized funnel or from a can with a special pouring head.
- For greater convenience, place the machine in the operating position.
- Make sure the apparatus is stable while carrying out this procedure so it doesn't topple over.

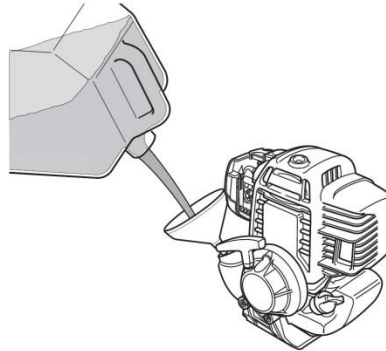

Petrol tank capacity :
0,63 L

Recommended fuel
Super unleaded.
Octane rating 91 minim.

STORING FUEL
PETROL CONTAINING ALCOHOL
FILLING THE OIL TANK
CHECKING THE OIL LEVEL

For these points, consult the user manual of the Honda GX35 motor

b. Before starting up

- Check the protection casings are in place, correctly tightened and are not showing any defects (cracks).
- Check that any accessories are attached correctly and firmly, check the condition of the handles and switches as well as the petrol and oil tank caps.
- Move the machine away from where the fuel was added.
- Place the actuator flat on the ground close the device that it will actuate.
- Make sure that the spark plug hood is in place.

• GENERAL PRECAUTION :

- Make sure the "STOP-0 I START" button is in the stop position (0) and never start the actuator directly coupled to a handwheel or valve.
- If this precaution is not taken, the actuator risks being set in motion when the motor starts (despite the clutch) and could cause bodily harm.
- The petrol gas actuator PY68 can run in any position but must be started up horizontally so that lubrication is correct.



• COLD START

The actuator is considered "cold" if the motor has not been turned over prior to starting.

NOTE: If the ambient temperature is quite hot (in summer), it may be that the motor starts better without a choke.

START UP AS FOLLOWS:

1. Move the choke lever (3) in the up position (closed).
2. Press several times on the priming bulb [4], located under the carburetor, to draw in the petrol.

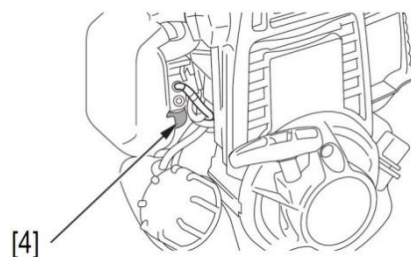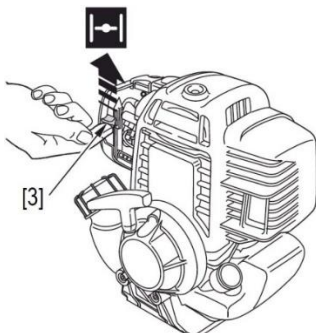


3. Place the "STOP-0 I START" button [2] in the START position. Press the two switch buttons and raise the cursor into the START position.



4. Pull the starter grip gently until you feel resistance, then pull briskly and return the starter grip gently.



5. When the motor has started, move back the choke lever [6] in the down position.

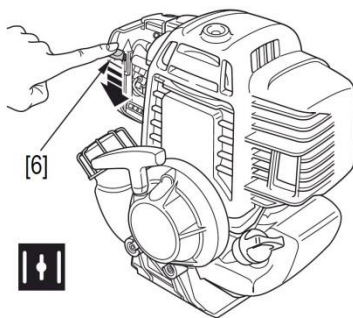

PRECAUTION :

- Don't pull the starter grip to its full extent.
- Do not allow the starter grip to snap back against the actuator. Return it gently to prevent damage to the starter.

NOTE : Always pull the starter grip vigorously. If you don't, the spark plug won't produce the sparks needed to start the motor. Don't place a foot or knee on the transmissions tube to stabilise the machine – you could twist it and make the machine unusable.

• HOT START

The actuator is considered as « hot » if it has ran over more than 5 minutes in the past 10 minutes. The procedure for starting from hot is identical to that of starting from cold except that there is no need to use the choke that should remain in the down position [6].

NOTE: In case of difficulty starting the motor from hot, use the following procedure:

1. Turn the actuator switch « STOP-0 I START » to the "STOP-0" position.
2. Move the choke lever down to the "open" position.
3. Hold the throttle lever in the max speed position.
4. Pull the starter grip 3 to 5 times.
5. Start the actuator following the procedure described above.

• STOPPING THE ACTUATOR

1. To stop the engine, simply push the actuator switch « STOP-0 I START » to the "STOP-0" position
2. This is also the way to stop the actuator in case of emergency.



Please note that the actuator can carry on turning by inertia after stopping the motor.

6. Setting up the Portable Valve Actuator


a. General info



The actuator must be kept stable while turning the valve or handwheel.

modéc Portable Valve Actuators can be used in any position.

However, to ensure the operator is working safely and in the best conditions, it is imperative that the actuator is used in the axis of the handwheel being activated.

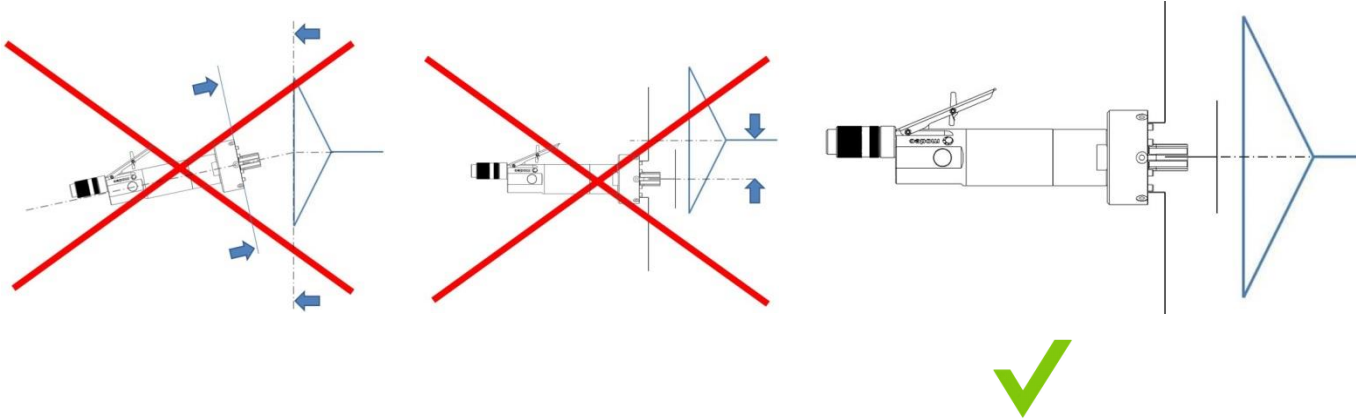

NB: These diagrams are made with one of the **modéc** actuators. However, the head (flange and output shaft) being identical on all actuators, they apply in the same way to all the actuators of the range.

b. Fixing the actuator on to the torque management device and/or on an adaptor



To ensure the operator is working safely and in optimum conditions, it is imperative to use a torque retention system.

Our actuators are delivered with:


- A BR001 torque management reaction bar
- A strap or a chain
- 2 carabiners.

In addition to this basic pack, **modéc** also has a wide range of torque management accessories (see the catalogue and the following presentation for more details).

As well as these standard accessories, **modéc** develops specific systems. If you would like to check your installation or if you have a specific solution request, contact a registered **modéc** distributor.

Besides this torque retention rod, it is also possible using the “**modéc** standard” flange and shaft to fix the system to RA30 right-angled models, to BJH hollow heads and all **modéc** torque management accessories (see catalogue).


If the standard equipment does not provide a torque retention that offers sufficient safety for both operators and equipment, **modéc** can develop and/or adapt special torque management systems.

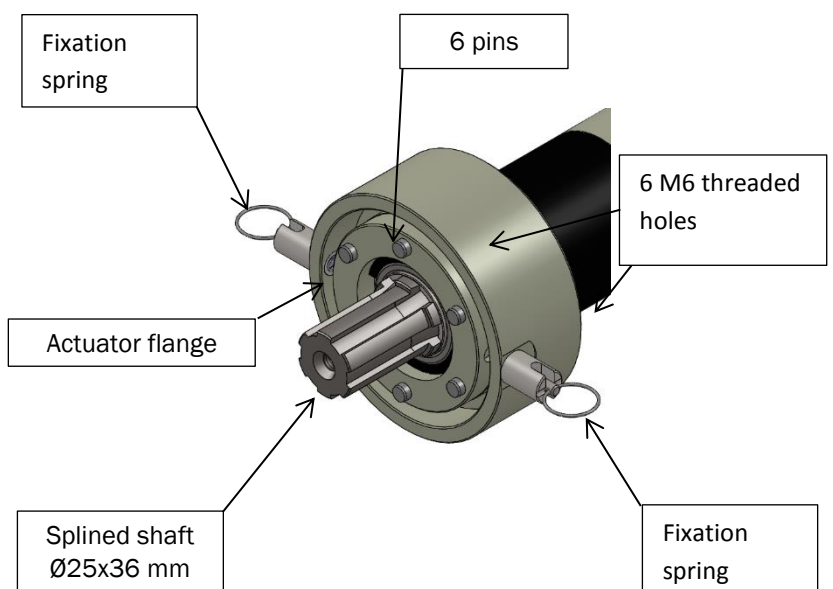

Never use a portable actuator with a torque management system that is under-sized, unstable or badly positioned.


c. Fixing the BR001 torque management arm and anchoring strap

Pull each fixation spring with the ring and rotate for a quarter turn so that they stay in the pulled position. Place the black ring of the torque management bar on the flange so that the 6 pins enter the corresponding holes. Make a quarter turn with the fixation springs rings and release the springs making sure they come back. Check that the torque management bar is properly secured to the flange.

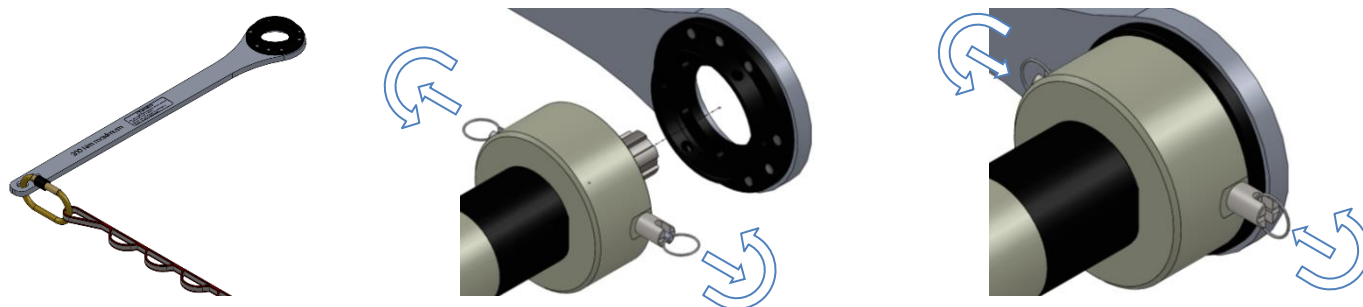


d. Setting the system for rotation "D1"

Switch the rotation direction lever to "D1"

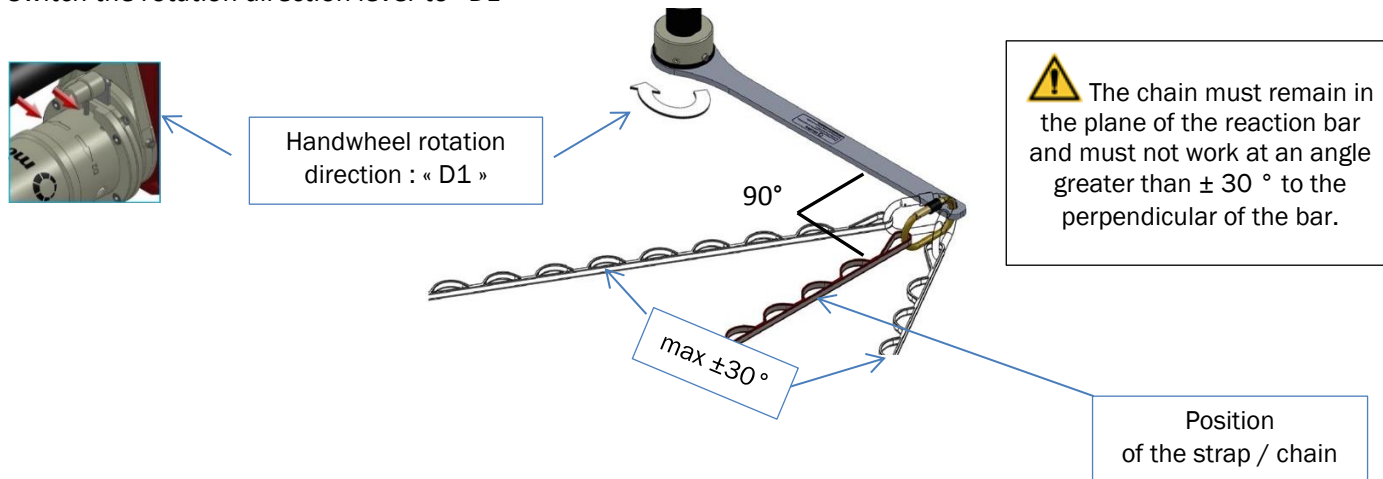


e. Setting the system for rotation "D2"

Switch the rotation direction lever to "D2"

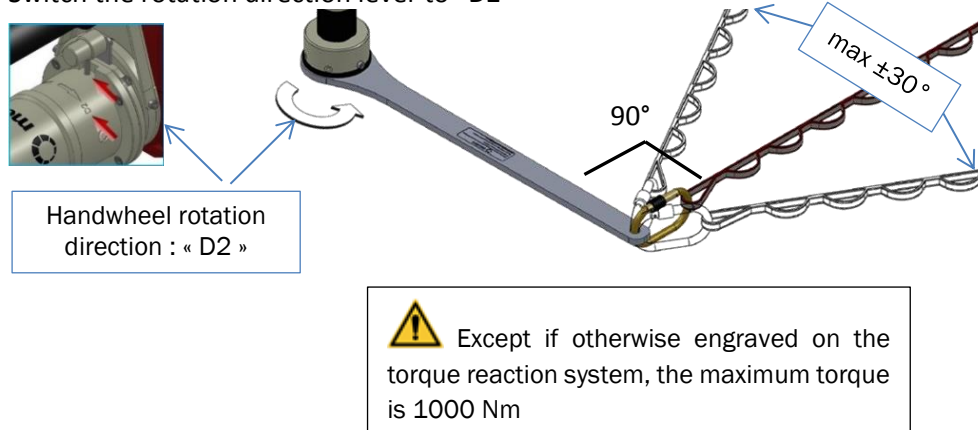


7. Using the actuator

a. Preliminary checks

- 1- Check the equipment is in good condition and use accessories that are the most suitable for the actuator.
-  **Make sure the torque management system and the handwheel adapter are compatible with the action about to be carried out.**
- 2- Start the petrol gas motor and leave it to run slowly.
- 3- If the actuator has a torque limiter, set it to minimum.
- 4 - Check the rotational direction required for the valve, indicated on the handwheel or the manual. Set the defined rotational direction using the actuator's left/right switch.
- 5 - Position the adaptor on the valve and set up the torque retention system. Consult the instructions for adaptors.
- 6 - Check the operator is correctly positioned in relation to both the actuator and the torque retention rod. When used, the actuator (or the torque retention rod) is designed to have a tendency to move away from the operator. This way, if there is a malfunction, the operator drops the tool safely and it will then move away from him and immediately stop.

Handwheel direction, reaction bar fixation and operator position

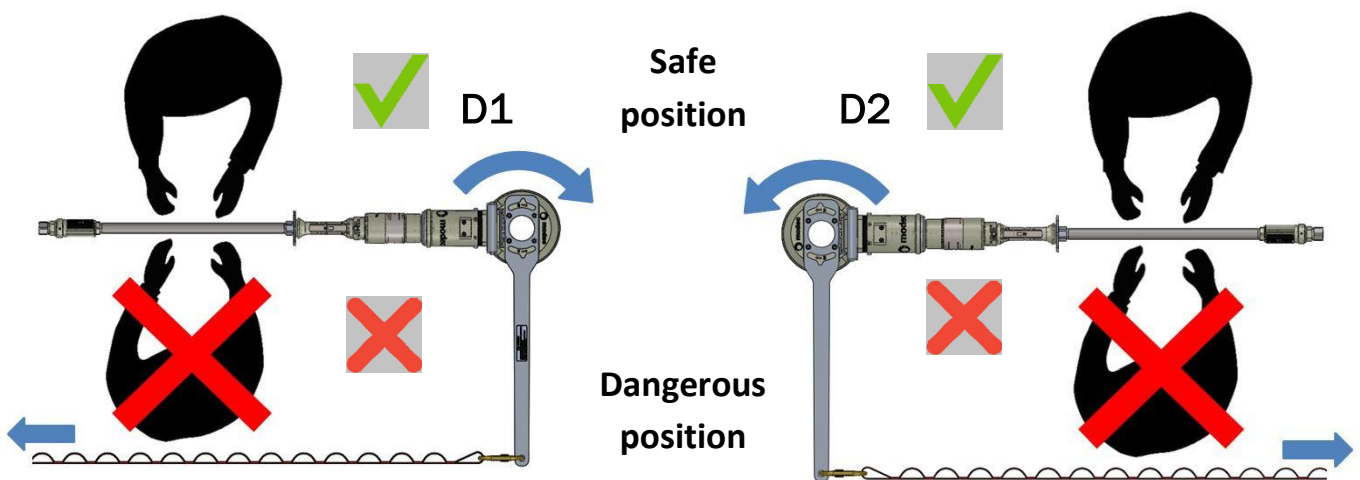

- 6 - When starting up **always** start up slowly in order to **VERIFY** the rotational direction, and to put tension on the torque retention strap or chain.



Switch on to (Start)
Once started, let the motor run slowly



Lock the safety trigger



Accelerate slowly

The apparatus is equipped with a clutch. When accelerating, the motor runs before engaging the gearbox and output. This shift process is normal.

b. Potential problems when actuating a valve

1 – If the valve doesn't move, release the handle and change the actuator's rotational direction to give it a little nudge.



Check again the direction of the torque retention.

2 – If there is increased resistance from the valve (torque applied to the actuator), the actuator will slow down until the clutch will slip. At this moment, the motor will run but the output shaft will not. Release the throttle.

3 – Be very careful that the applied torque does not exceed the limits the valve can withstand, or use a torque limiter (optional).

4 – In case of resistance resulting from deposits on the stem, turn the valve in both directions several times to 'clean' it. **modec** revolution counter (optional) enables you to always know which position the valve is in.

5 – When the closed position is reached, make sure the torque does not exceed the level that the valve can withstand. Unless the procedure indicates otherwise, reopen the valve with a few turns so that the accelerated fluid "cleans" any potential impurities from the valve, then close it again at the desired torque.

6 – When the maximum open position is reached, reclose with a few turns to avoid the valve being stuck in future. Doing this also means that the valve is still able to turn when next actuated even if the operator turns it the wrong way, which again helps prevent the valve being stuck.




Take note - **the torque when closing a valve should always be inferior to the torque when opening a valve**, in order to guarantee that the valve can be reopened. Using a torque limiter for closing and opening a valve means you can be always be sure to have enough torque in reserve for the valve to be reopened or reclosed.

8. Options

a. Digital Revolution counter

• PRESENTATION


The digital Revolution counter adds up the revolutions in one direction and subtracts them in the other direction in such a way that the operator always knows where he is in relation to the initial set-up. The tool also measures and shows the rotational speed.

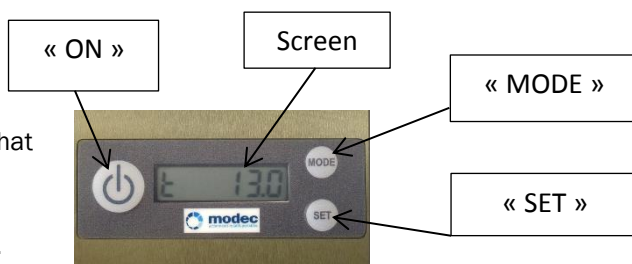

Nota 1 : The instant speed indicator needs several revolutions before it can give a stable and regular speed. In light of this, you have to wait several seconds to get a reliable reading.


Nota 2 : The screen turns itself off after 5 minutes.

• HOW IT WORKS

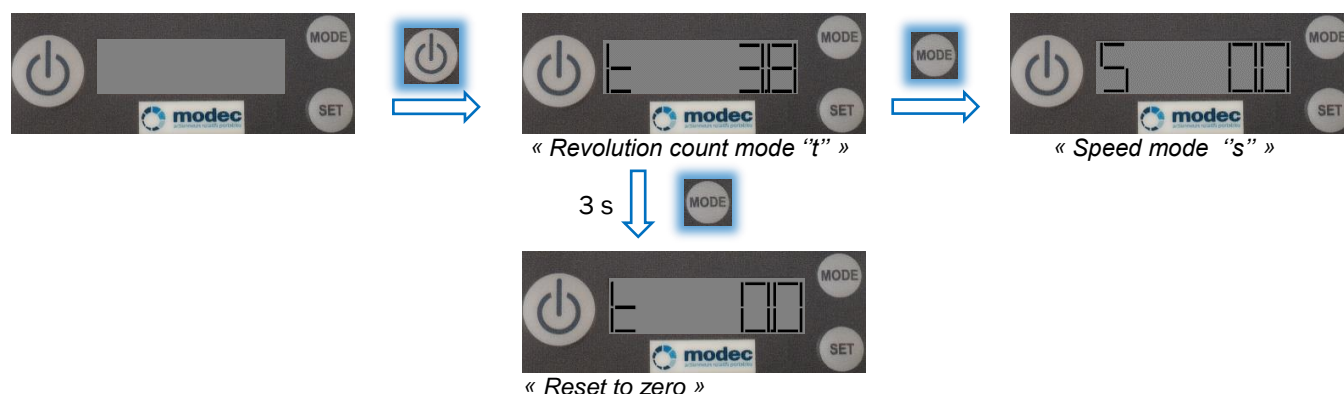


• REVOLUTION COUNTER PARAMETERS

The revolution counter is set by default for a straight or right angle head standard output shaft (STD), without Banjo head.

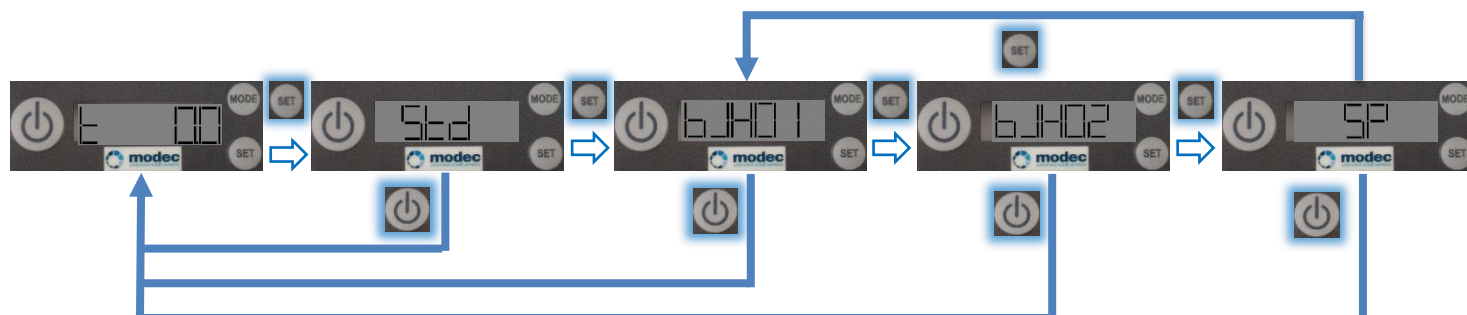

When used with a BJH banjo head (see chapter 8), the number of turns and the output speed of the actuator will be different, so you need to select "BJH01" for a standard duty Banjo head (speed is divided by 4) or "BJH02" for a heavy duty Banjo head (speed is divided by 3).


If you want to set a specific ratio for speed and count, select "SP", then indicate if you want to multiply ("M") or divide ("d") the speed and number of turn, and set the ratio "I=" from 1.0 to 20.0.

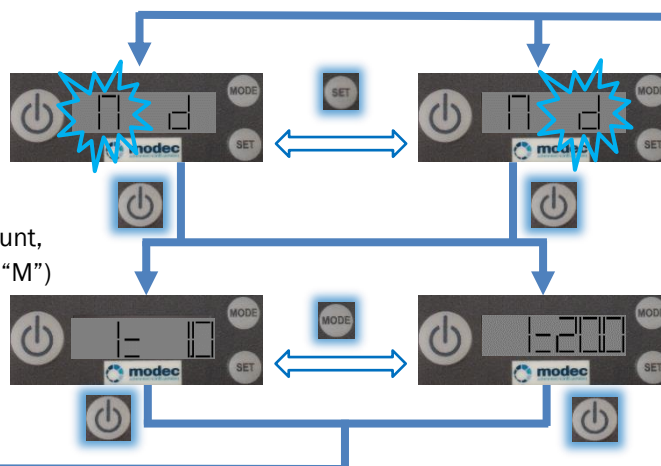

• CHANGING THE BATTERY



Use a 3mm hexagonal

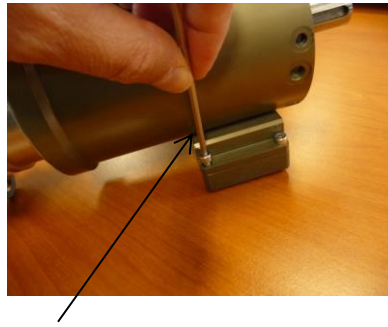

Use an AA 3,6V Li-SOCL2 battery



Reposition the wires correctly before tightening the 4 screws

b. Torque limiter

The **modéc** torque limiter allows setting the actuator maximum torque within a certain range

1 – Thumb wheel : to block the adjustment ring in the chosen position

2 – Adjustment ring : Allows setting the maximum torque value.

- « + » – Direction to increase torque limit
- « - » – Direction to decrease torque limit

3 – Reloading ring : to reload the torque limiter after it stops.

• HOW IT WORKS

1. Set the maximum torque value to the desired level:

- Loosen the thumb wheel (1)
- Move the adjustment ring (2)
- Tighten the thumb wheel (1)

2. Check the torque limiter is engaged by pushing the reloading ring (3) towards the front of the actuator.


3. Use the actuator until the torque limiter is released.

4. Re-engage the limiter by pushing the ring (3) towards the front of the actuator.



This procedure can only be carried out if the motor is stopped (or, for the petrol gas actuator, if the motor is running slowly with the clutch not engaged).

In order to avoid any untimely disengagement, make sure that you start the actuator gradually, and smoothly.

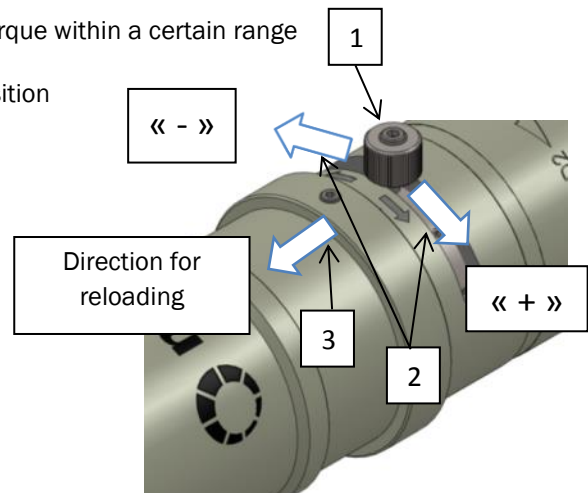

The torque limiter is available as an option in line with the following references:

Straight or with RA30 right angle head	Reduction ratio	Minimum torque limit Nm (lb.ft)	Maximum torque limit Nm (lb.ft)
Easy duty	54	37 (27)	92 (68)
Standard duty	169	115 (85)	288 (212)
Heavy duty	258	176 (130)	440 (325)
Super heavy duty	564	380 (280)	960 (710)

With Banjo head BJH01	Reduction ratio	Minimum torque limit Nm (lb.ft)	Maximum torque limit Nm (lb.ft)
Easy duty	216	148 (109)	368 (271)
Standard duty	Not available	Not available	Not available
Heavy duty			
Super heavy duty			

With Banjo head BJH02	Reduction ratio	Minimum torque limit Nm (lb.ft)	Maximum torque limit Nm (lb.ft)
Easy duty	162	111 (82)	276 (204)
Standard duty	507	345 (254)	864 (637)
Heavy duty	Not available	Not available	Not available
Super heavy duty			

Torque values indicated in these tables can vary depending on customers' request

9. Servicing and maintenance

Take the machine to a registered **modéc** distributor for servicing every 400 hours or at least once a month.

Maintenance operation	Weekly	Yearly or as needed
Check and service the actuator by a registered modéc distributor		
Grease the right-angled head (grease type ORAPI n° 606-CTDMEP2)		
Replace the Revolution counter battery *		
Check the torque limiter* by a registered modéc distributor		

*The revolution counter and the torque limiter are optional

Maintenance to be carried out at the indicated intervals in months or in hours of use, from the first deadline onwards.			Interval			
			After each time used	Every 3 months or 25 hours	Every 6 months or 50 hours	Every year or 100 hours
Range	Parts	Task				
PY68	Condition of the tool and protective elements	Check	U			
PY68	Functioning of the triggers and Stop/ Start button	Check	U			
PY68	Functioning of the setting systems for the torque, power and direction inversion	Check	U			
PY68	Condition of the cables and/or leads	Check	U			
PY68	Motors cooling fins	Clean			U	
PY68	Clutch spring and runners	Check			M	
PY68	Coasting / Clutch	Check	U			
PY68	Air filter parts	Check	U			
		Clean		U		
PY68	Air filter casing	Clean		U		
PY68	Spark plug surrounds	Clean			U	
PY68	Spark plug	Check				U/M
		Clean				U
PY68	Carburetor surrounds	Clean		U		
PY68	Petrol circuit	Check	Tous les 2 ans (remplacer si nécessaire) U ou M			
PY68	Petrol filter	Check				U/M
PY68	Coasting	Check				U
		Adjust				U/M
PY68	Motor oil	Check	U			
		Replace	Remplacer après 10 heures et ensuite tous les 6 mois ou 50 heures			
PY68	Oil tank level	Clean				U/M
PY68	Valve play	Adjust				U/M

U : user – M : **modéc** registered distributor / repairer

General recommendations

- Take note of all the work health and safety regulatory provisions that apply and any local workplace safety instructions including conditions relating to the work environment, clothing and the operator's individual protective equipment as required by all the applicable regulations.
- It is advisable to keep a maintenance log for all maintenance tasks carried out on the actuator.
- Prevent foreign bodies from entering the system by using a clean work surface in order to protect the delicate moving parts from being contaminated by dirt or foreign materials when assembling and disassembling, as this could cause a deterioration of the mechanical parts.**
- Maintenance of the Portable Valve Actuators should be carried out by people who have been trained by **modéc**.
- Our "After Sales Service" department are ready to help in this respect.
- Systematically take out the spark plug before carrying out any procedure that involves replacing, adjusting, servicing or disassembling the actuator or any of its parts.
- Every time maintenance is carried out, test the actuator afterwards to check it is working correctly.
- Only use approved replacement parts and follow the manufacturer's advice with regard to lubrication and waterproofing.**

10. Problem solving

Petrol gas Portable Valve Actuator PY68			
Symptom	Probable causes	Checks & solutions	Repaired by
The actuator won't start or stops during use	There is no petrol	Add petrol	User
	The cursor button is on STOP	Move the button to START	User
	The cap of the starter spark plug is not attached properly or is disconnected	Replace the cap	modec Distributor
	The starter spark plug is defective or the spacing of the electrodes is incorrect	See maintenance chapter	User modec Distributor
	The motor is flooded	Take out the spark plug, dry it with a cloth	User modec Distributor
	The petrol filter is dirty, the air filter is blocked, carburetor anomaly, starter anomaly, valves seized etc.	Put the spark plug back in	modec Distributor
The motor turns but the actuator doesn't work.	The clutch is worn out	Needs servicing by an expert	Distributeur modec
	The gear box is damaged		
The motor heats abnormally	The air filter is dirty	Remove and clean the air filter	User
	The starter spark plug is defective or the spacing of the electrodes is incorrect	Needs servicing by an expert	modec Distributor
	The motor's cooling fins are dirty	Clean the fins	User

Revolution counter (optional)					
Symptom	Screen status	Probable causes	Checks	Solutions	Repaired by
The counter doesn't give a reading	Off	Timer elapsed / automatic stop		Activate the "ON" button	User
		Flat battery	Check the state of the battery	Change the battery	User
		Screen is out of order	Check with a registered modec distributor	Change the screen	modec Distributor
The counter is on but doesn't count	On and not moving	Poor connection between the captor and the card	Check the sensor connection	Reconnect the sensor	User modec Distributor
		Captor and/or the card is out of order	Check with a registered modec distributor	Change the electronic card	modec Distributor

Torque limiter (optional)			
Symptom	Probable causes	Solutions	Repaired by
The motor runs but the output shaft doesn't	The torque limiter is disconnected	Re-engage the torque limiter Start the actuator smoothly	User
	The torque limiter setting is too low	If possible, increase the maximum torque value	User
		Check the torque limiter status (is it damaged ?) Change the torque limit range	modec Distributor

11. Warranty

modec guarantees its equipment in accordance with the following conditions:

- During 12 months as of the delivery date, **modec** warrants its equipment against all material and manufacturing defects, except for consumable parts and elements that are out of order due to normal wear and tear further to standard use 8 hours per business day. During the aforementioned period, **modec** will replace or repair all parts acknowledged as defective by our departments, which parts shall have been promptly returned by the buyer to **modec** plants, all carriage costs and duties paid, enclosing a detailed description of the recorded breakdown and the warranty certificate.
- Components that were not manufactured by us come under the relevant manufacturer's warranty.

This warranty shall only be applicable if the machine is used with **modec** consumables. We hold no liability if our products are used in an abnormal manner.

AGREEMENT REVIEW

Significant modifications in the Buyer's economic or financial situation, including the sale, transfer, pledge or contribution of the latter's business or assets, and if payment or acceptance of bill is not performed on the agreed date, even further to partial order performance, may entail revision of the conditions thereof and the overall credit conditions granted.

INTELLECTUAL PROPERTY

We continue to hold all intellectual property rights to our projects, studies and documents that shall not be communicated, exploited or reproduced without our prior written authorization.

FORCE MAJEURE EVENT

modec shall not be held responsible for any breach whatsoever of its contractual obligations that result from causes which are beyond our control such as, amongst others: fire, storms, flooding, earthquake, explosion, accident, strikes and/or industrial disputes, hostile actions, insurrection, war (declared or otherwise), rebellion, sabotage, epidemics, quarantine, impossibility of ensuring supplies of parts, raw materials or machinery, Government decision and legal actions.

APPLICABLE LAW

The agreement shall be governed and construed in accordance with French law.

POWER OF JURISDICTION

All disputes or litigation which have not been amicably settled shall be referred to the Commercial Court of Romans, acknowledged as sole competent jurisdiction by the contractors, including in the event of the introduction of third parties.

OTHER CONDITIONS

Those of the Federation of Mechanical Industrialists of France.